 


Outdoor Full-Motion TV Wall Mount

Model:
DWM3780XOUT

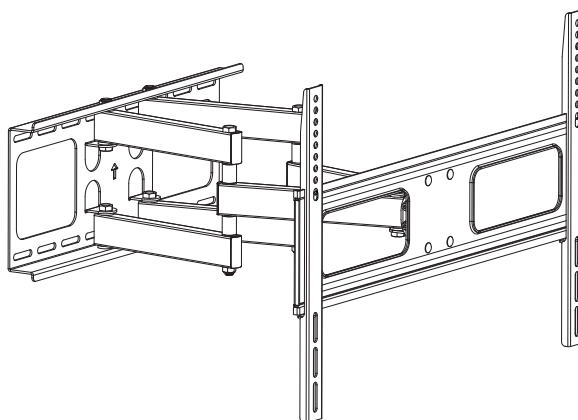

CAUTION: DO NOT EXCEED MAXIMUM LISTED WEIGHT CAPACITY. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!



200 x 200, 300 x 200
300 x 300, 400 x 200
400 x 300, 400 x 400
600 x 400



Este manual está disponible en español en la página de Eaton:
Tripplite.Eaton.com/support

Ce manuel est disponible en français sur le site Web de Eaton :
Tripplite.Eaton.com/support

Русскоязычная версия настоящего руководства представлена на веб-сайте компании
Eaton по адресу: Tripplite.Eaton.com/support

Dieses Handbuch ist in deutscher Sprache auf der Eaton-Website verfügbar:
Tripplite.Eaton.com/support



PRODUCT REGISTRATION

Register your product today for a chance to win an ISOBAR® surge protector in our monthly drawing!
Tripplite.Eaton.com/warranty



Important Safety Instructions

Note: Read the entire instruction manual before you start assembly and installation.



- Do not begin the installation until you have read and understood the instructions and warnings contained in this manual. If you have any questions regarding any of the instructions or warnings, please visit Tripplite.Eaton.com/support.
- This mounting bracket was designed to be installed and used ONLY as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone of good mechanical ability, with basic building experience and a full understanding of this instruction manual.
- Make sure the mounting surface can safely support the combined load of the equipment and all attached hardware and components.
- If mounting to wood wall studs, make sure mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Always use an assistant or mechanical lifting equipment to safely lift and position equipment.
- Tighten screws firmly, but do not overtighten. Overtightening screws can damage the items, greatly reducing their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Warranty and Product Registration

5-Year Limited Warranty

We warrant our products to be free from defects in materials and workmanship for a period of five (5) years from the date of initial purchase. Our obligation under this warranty is limited to repairing or replacing (at its sole option) any such defective products. Visit **Tripplite.Eaton.com/support/product-returns** before sending any equipment back for repair. This warranty does not apply to equipment which has been damaged by accident, negligence or misapplication or has been altered or modified in any way.

EXCEPT AS PROVIDED HEREIN, WE MAKE NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

EXCEPT AS PROVIDED ABOVE, IN NO EVENT WILL EATON BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. Specifically, we are not liable for any costs, such as lost profits or revenue, loss of equipment, loss of use of equipment, loss of software, loss of data, costs of substitutes, claims by third parties, or otherwise.

 
PRODUCT REGISTRATION

Visit Tripplite.Eaton.com/warranty today to register your new product. You'll be automatically entered into a drawing for a chance to win a FREE Eaton Tripp Lite series product!*

* No purchase necessary. Void where prohibited. Some restrictions apply. See website for details.

Component Checklist

IMPORTANT: Ensure you have received all parts according to the component checklist prior to installing. If any parts are missing or faulty, visit Tripplite.Eaton.com/support for service.

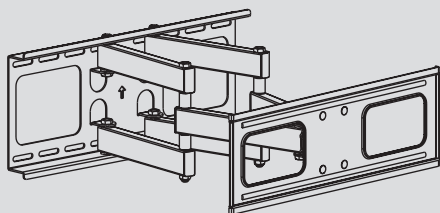


A
Mount Assembly
(x1)



B
Adapter Bracket
(x2)



 C
Cable Tie
(x2)



D
Hex Key
(x2)

Package M



 
M-A
M5x14 Screw
(x4)




M-B
M6x14 Screw
(x4)



M-C
M6x30 Screw
(x4)



M-D
M8x30 Screw
(x4)

 

M-E
M8x50 Screw
(x4)



M-F
D6 Washer
(x4)



M-G
D8 Washer
(x4)



M-H
Small Spacer
(x8)



M-I
Large Spacer
(x8)

Package W



W-A
Tapping Screw
(x6)



W-B
Anchor
(x6)

 
 
 


W-C
Washer
(x6)



Assembly

1A



Mount on Wood Stud Wall

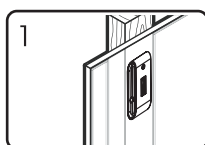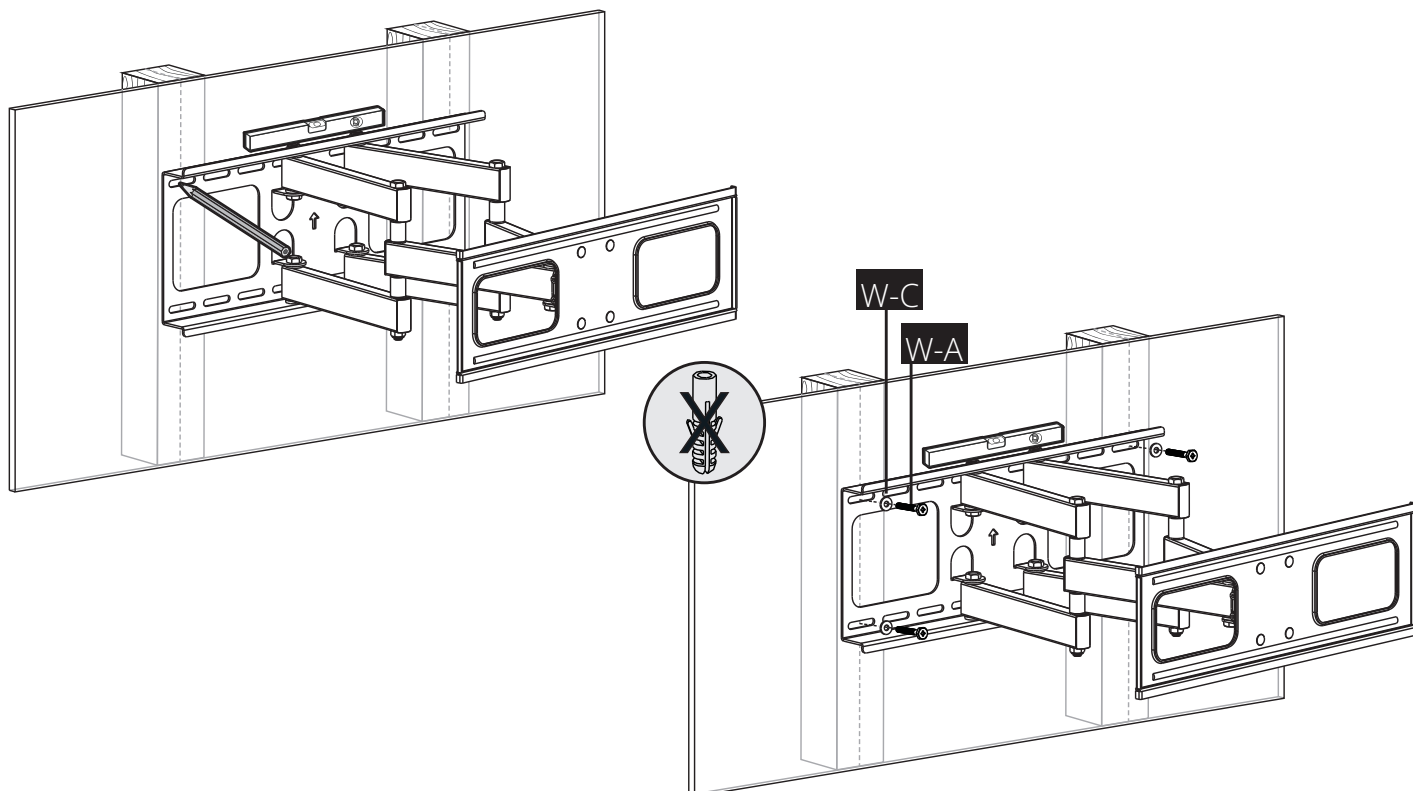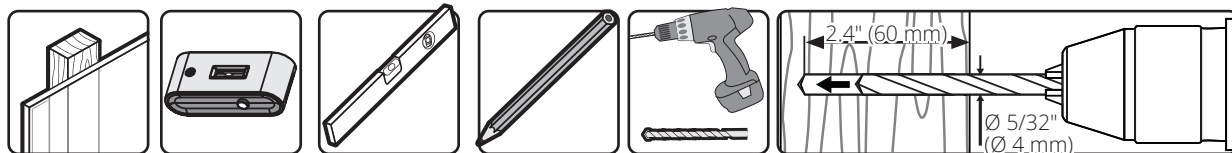

  1 Find and mark the exact location of mounting holes

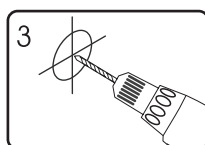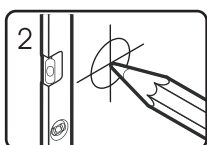

3 Drill pilot holes

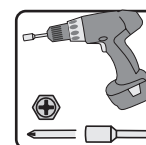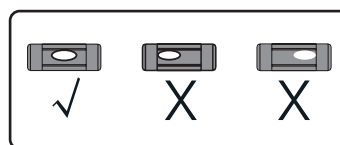  

Screw the wall mount onto the wall

 
⚠ WARNING

- Make sure mounting screws are anchored into the center of the studs. Use of a stud finder is highly recommended.
- Installers are responsible to provide hardware for other types of mounting situations.
- Installers must verify the supporting surface will safely support the combined load of the equipment and all attached hardware and components.

Assembly

1B

Mount on Solid Brick or Concrete Block

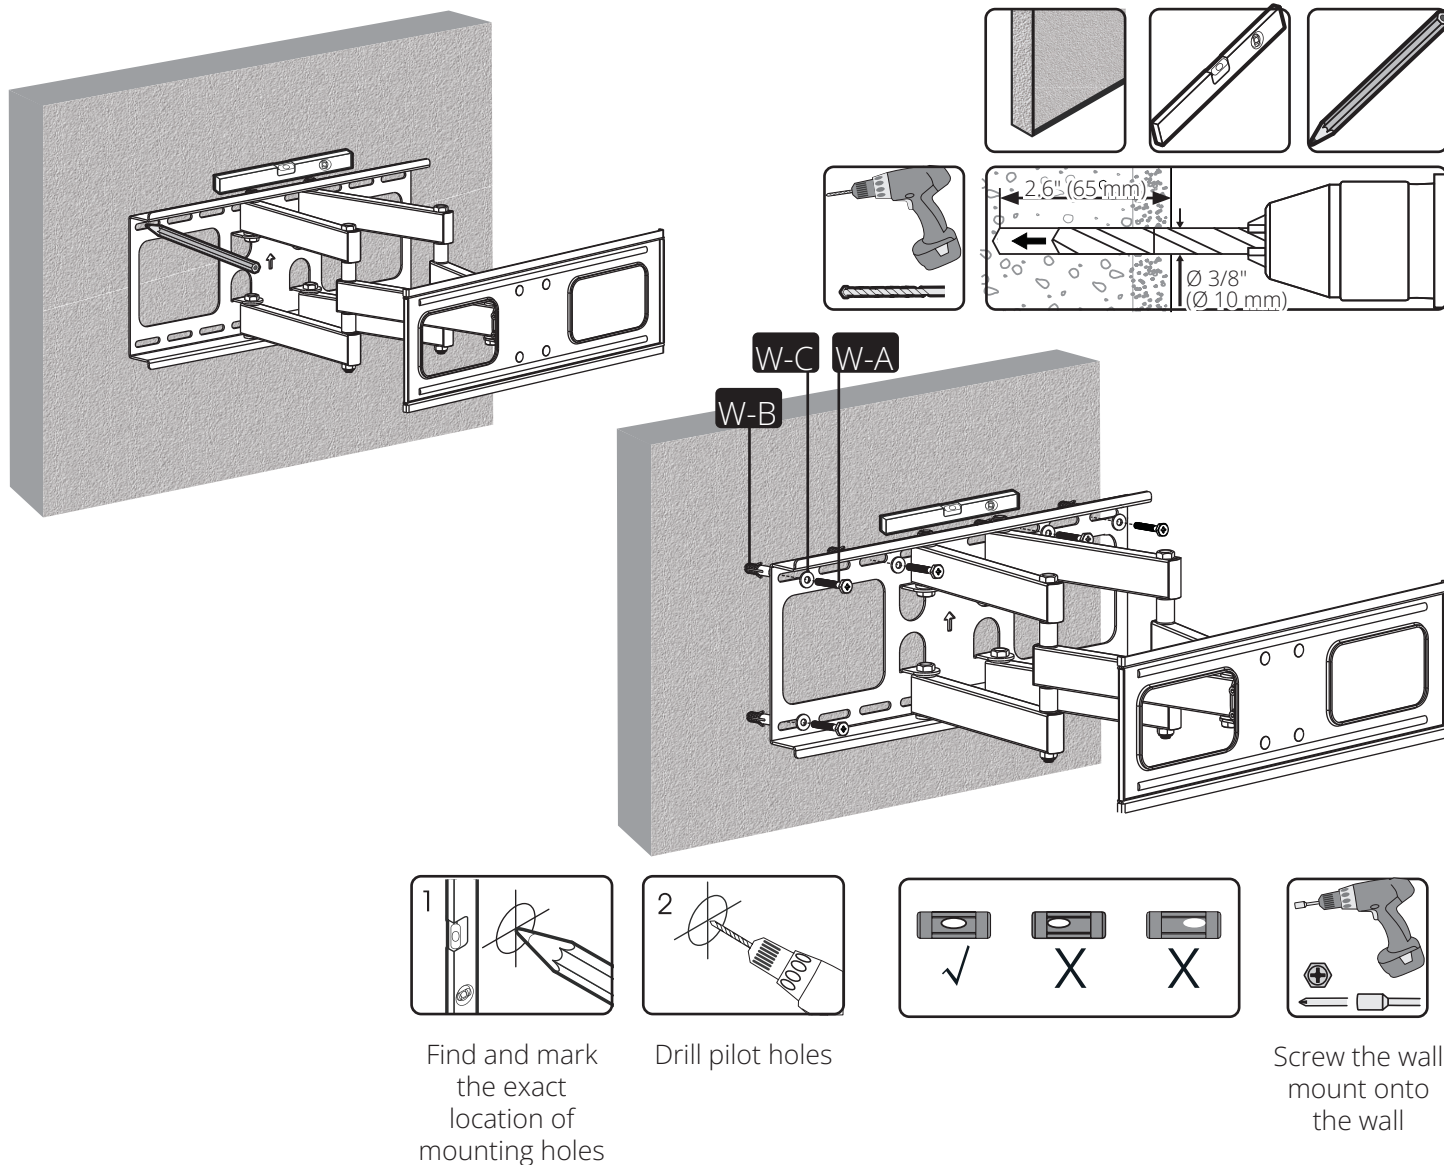




⚠ WARNING

- When installing wall mounts onto a concrete masonry unit (also known as a CMU or "cinder block"), verify that the actual concrete thickness is at least $1 \frac{3}{8}"$ (35 mm) in order to hold the concrete anchors. **DO NOT DRILL INTO MORTAR JOINTS!** Be sure to mount the assembled wall-mount plate with the included concrete anchors, washers and anchor bolts onto solid sections of the blocks. The solid sections can generally be found 1" (25 mm) toward the middle of the block from either end. An electric drill on a slow setting is suggested to drill the hole rather than a hammer drill in order to avoid breaking out the back of the hole when entering a hollow section.
- Installers must verify that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.



Assembly

2

  
 
Install Adapter Brackets

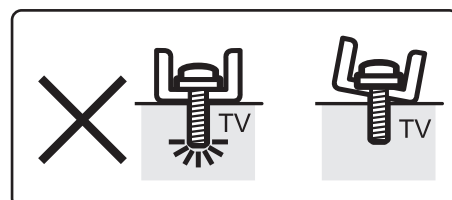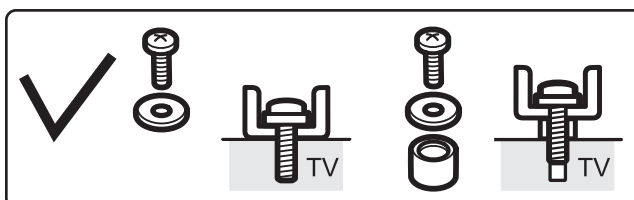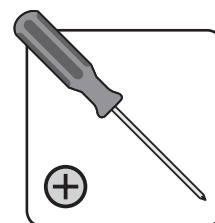


2-1 For Flat Back Screen

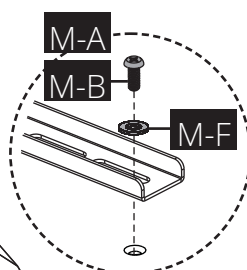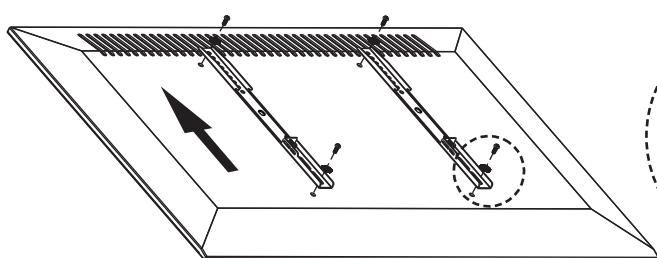  

 
 
2-1 For Recessed Back Screen or to Access A/V Inputs

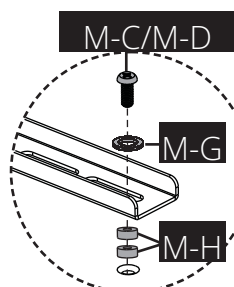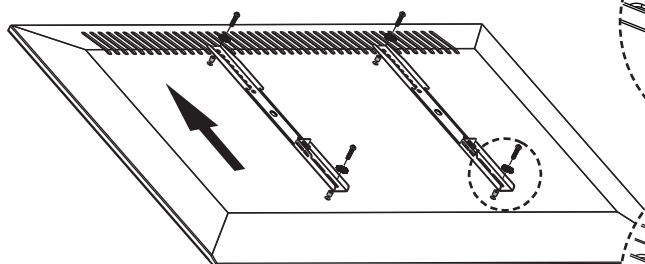


or

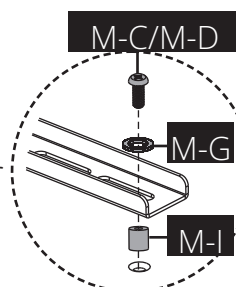 


or

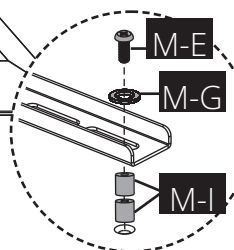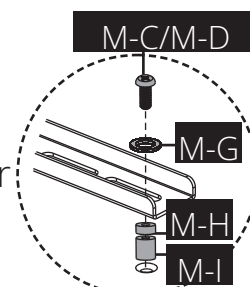  

or

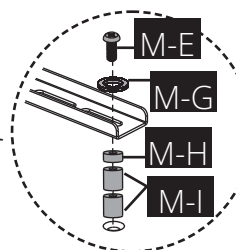 

or

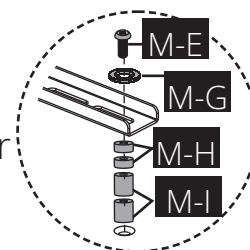 

Note: Choose appropriate screws, washers and spacers (if necessary) according to the type of screen.

- Position the adapter brackets as close as possible to the center of the display.
- Firmly secure the adapter brackets onto the display using the screws and any other necessary hardware components included with the unit.

 


Do not over-tighten screws.

Assembly

3



Hang Display onto the Wall Mount

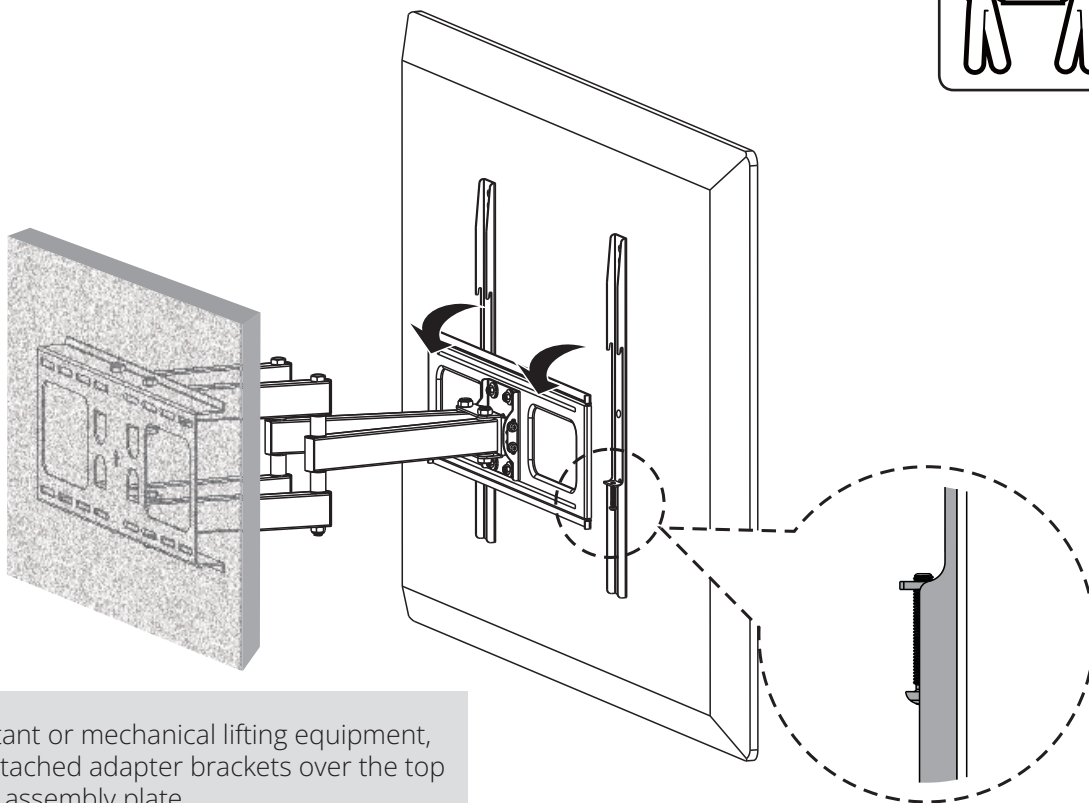

With the aid of an assistant or mechanical lifting equipment, hook the display with attached adapter brackets over the top of the wall mount's arm assembly plate.

4

  Hang Display onto the Wall Mount

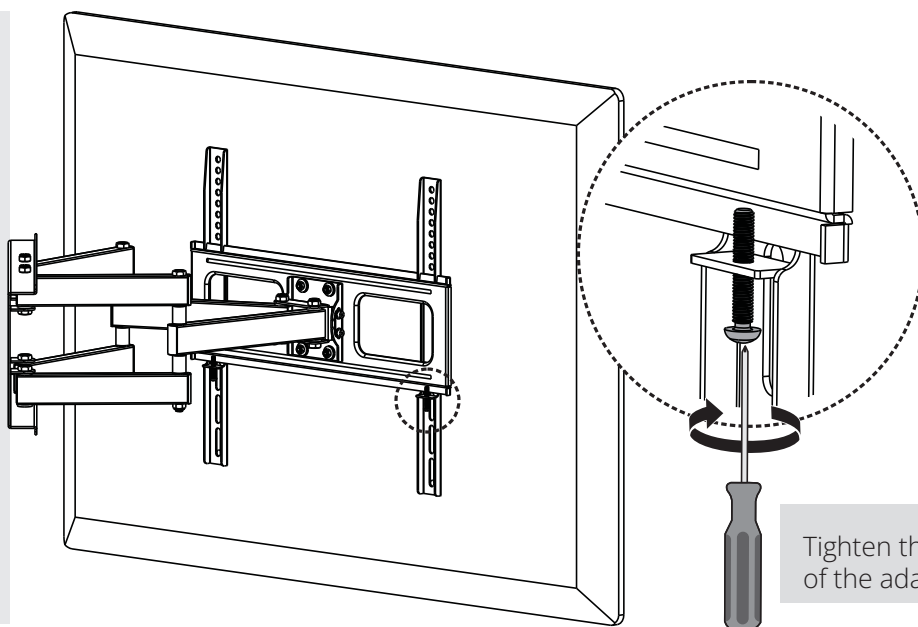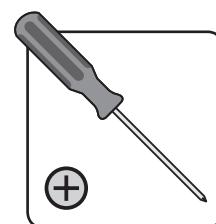


Tighten the two safety bolts on the bottom of the adapter brackets to secure the unit.

Assembly


5

 Cable Management

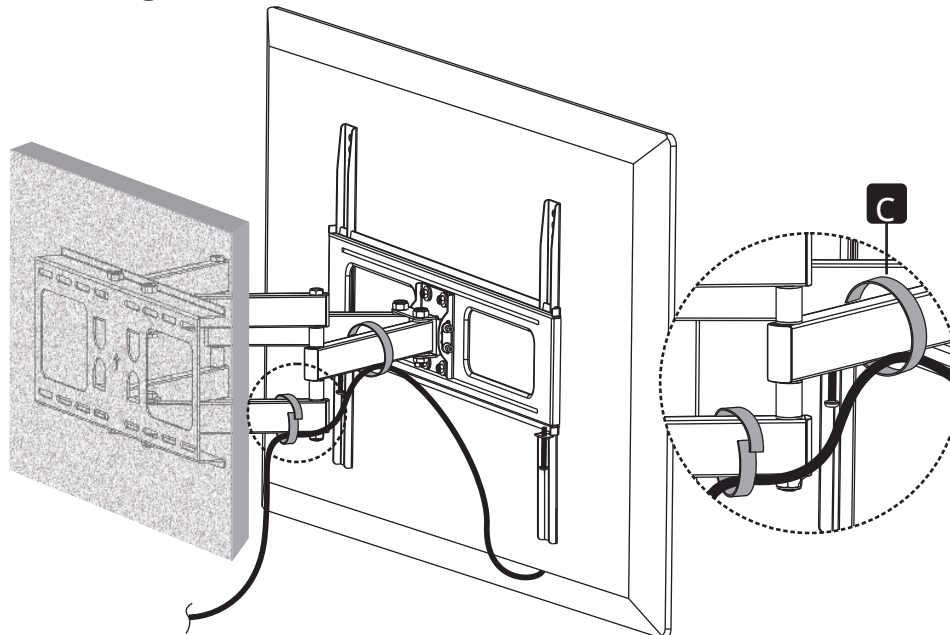

6

 Adjustment

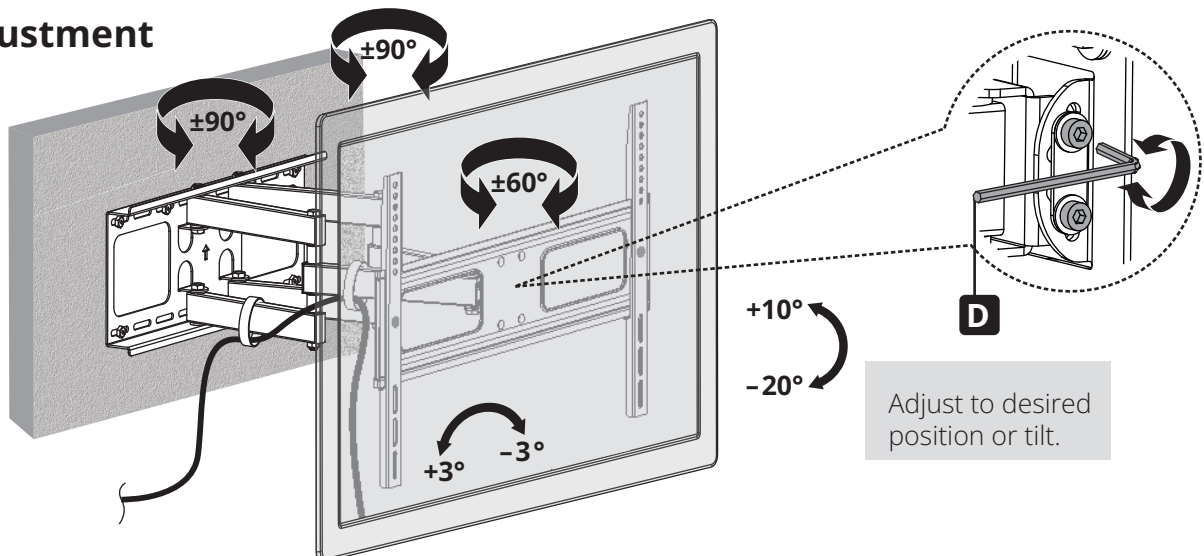

Maintenance

- Check that the bracket is secure and safe to use at regular intervals (at least every three months).
- Please visit [Tripplite.Eaton.com/support](https://www.tripplite.com/support) if you have any questions.

EATON

Powering Business Worldwide

Eaton
1000 Eaton Boulevard
Cleveland, OH 44122
United States
[Eaton.com](https://www.eaton.com)

© 2024 Eaton
All Rights Reserved
Publication No. 23-06-324 / 93-3CC5_RevC
March 2024

Eaton is a registered trademark.

All trademarks are property
of their respective owners.